

Cosy switch

Quick reference guide


About the Cosy switch

The switch controls the boiler, turning the heating on and off according to the heating schedule and also heats your hot water, depending on how it was installed.

The switch requires mains power and will have been installed as part of your Cosy system installation.

Control button

The control button **(A)** is green when the Cosy system is actively controlling your heating. Press the button to switch Cosy off if you need to revert to your existing heating controls.

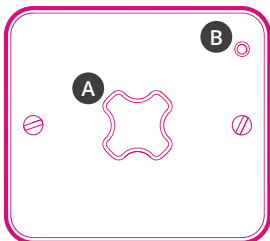

Link status

The link status indicator **(B)** shows the status of the wireless connection between the Cosy switch and the Cosy hub.

The indicator should normally be green.

Colour	Meaning
GREEN	Connected
AMBER	No signal to the hub. Try moving the hub closer to the switch
RED	The switch has not been paired to the Cosy system
OFF	No power to the switch

FAQs

The link light (B) on the switch is amber

If the link light is amber, this means the switch is not receiving a signal from the hub. Check that the hub is powered on and move it closer to the switch.

If the problem persists, contact your installer.

The link light (B) on the switch is red

This means that the switch is not paired with the hub. Contact your installer.

Can I disable Cosy?

Yes. Press the button in the middle of the switch **(A)**. This will deactivate Cosy and you can use your existing heating controls. Press again to activate.

Get more help and support online <http://comehometocosy.com/support>

COSY-B-USG-100_2